

CURRENT STATUS OF INSTRUMENT

BUTTON PRESS	OFF	NORMAL OPERATION	VIEWING MAX / MIN	GAS ALARM ACTIVE	FLOW FAULT ALARM	ZERO FAULT ALARM	IN 'LOC' LIST
▽ PRESS 		Change Range LEL to VOL (CGI only)					UP One Item
▽ PRESS & HOLD 	Switch ON (CGI only)	Store Values ▽ Switch OFF	Clear MIN / MAX	Store Values			Ramp UP
▽ PRESS 		View MAX	View MIN (if available)				DOWN One Item
▽ PRESS & HOLD 	Switch ON (CSM only)	Pump ON / OFF (CGI only) ▽ ZERO ▽ (CGI only)	Return to LIVE Readings	Acknowledge Latching Alarm (CSM only) Mute Non-Latching Alarm (CSM only)	Acknowledge Flow Fault Alarm - Switch Pump Back ON (CGI only)	Acknowledge Zero Fault Alarm	Ramp DOWN
PRESS & HOLD BOTH		Enter LOC List	Note: ▽ = Press & Extended Hold				Select & Exit